


## Door Panel Removal

These instructions are specific to the front-passenger door but the procedure for the other doors is not much different. The differences are that the back doors do not have a speaker in them and the driver door has the additional wood trim and controls that need to be removed.

1. Remove the plastic trim around the door handle. See figure 1.
2. Remove window switch and it will uncover one of the screws holding the door panel in place. Remove this screw. See figure 2.
3. Remove plastic plug and screw on the door handle. See figure 3.
4. Remove three screws on bottom of door panel. See figure 4.
5. Pull window switch until the harness connector comes out of the door. Unplug this harness. See figure 5.
6. Pull on the left and right sides of the door panel. You'll hear the plastic connectors come undone.
7. At this time, grab the door panel on the left and right side and pull it up (it hooks on the top of the door).
8. With one hand, hold up the door panel. With the other hand, reach behind the door panel and disconnect the wire harness connected to the door panel light. See figure 6.
9. At this time, the door panel should be free!



**Figure 1**

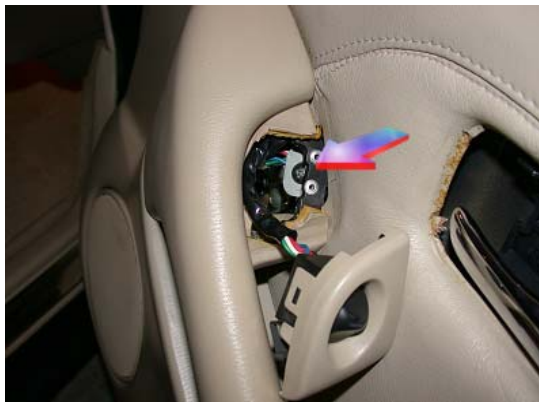

**Figure 2**



**Figure 3**



**Figure 4**



**Figure 5**



**Figure 6**