

## Tail Light Bulb Replacement

Note: These instructions detail the removal of the driver-side tail light assembly.

To replace your tail light bulbs follow the following steps:

- Open trunk. Remove plastic trim surrounding latch mechanism. It's held on by clips so just pull on it. See Figure 1.
- With the plastic trim out of the way, pull on the trunk lining material. This will expose three of the four bolts you need to remove. The bolts are 8mm in size. See Figure 2.
- For the fourth and final bolt, open the door to the side storage compartment. This is the compartment where your jack is stored. You will see a metal bracket with two additional 8mm bolts aligned vertically. You need to remove the top bolt. The bottom bolt is not attached to the tail light so it can be left alone. See Figure 3.
- With the four bolts removed, the tail light assembly will simply slide out allowing access to all the bulbs.



**Figure 1**



**Figure 2**



**Figure 3**